



- 1** **LV** Savienojiet paneļus  
**EN** Link the panels together  
**DE** Die Platten ineinander schieben  
**FR** Accouplés les panneaux
- 2** **LV** Novietojiet paneļus virzienā ar "ribām" pret koku  
**EN** Place the panels with the root guiding ribs towards the tree  
**DE** Die Platten mit den Führungsrippen zum Baumstamm gerichtet installieren  
**FR** Placer les panneaux avec les arêtes de guidage face au tronc d'arbre
- 3** **LV** Paneļu augšējai malai jābūt 1 cm virs zemes  
**EN** The top of the panels should be 1 cm above ground  
**DE** Die Platten 1 cm über das aufgetragene Bodenniveau herausragen lassen  
**FR** Placer les panneaux 1 cm au-dessus du niveau de la terre
- 4** **LV** Tieši gar stādvietas ārējo malu  
**EN** Directly alongside edge on the inside of the plant box  
**DE** Entlang de Seithaft am innenseite der Pflanzgrube  
**FR** Accouplés les panneaux

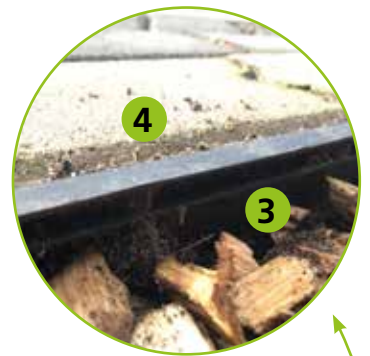

- LV** Stādbedres piemērs: 60 cm paneļi (TRG30/45/60)
- EN** Example planting hole lay-out: panels till 60 cm (TRG30/45/60)
- DE** Beispiel Pflanzlocheinrichtung: Platten bis 60 cm (TRG30/45/60)
- FR** Exemple de plantation: Panneaux à 60 cm (TRG30/45/60)

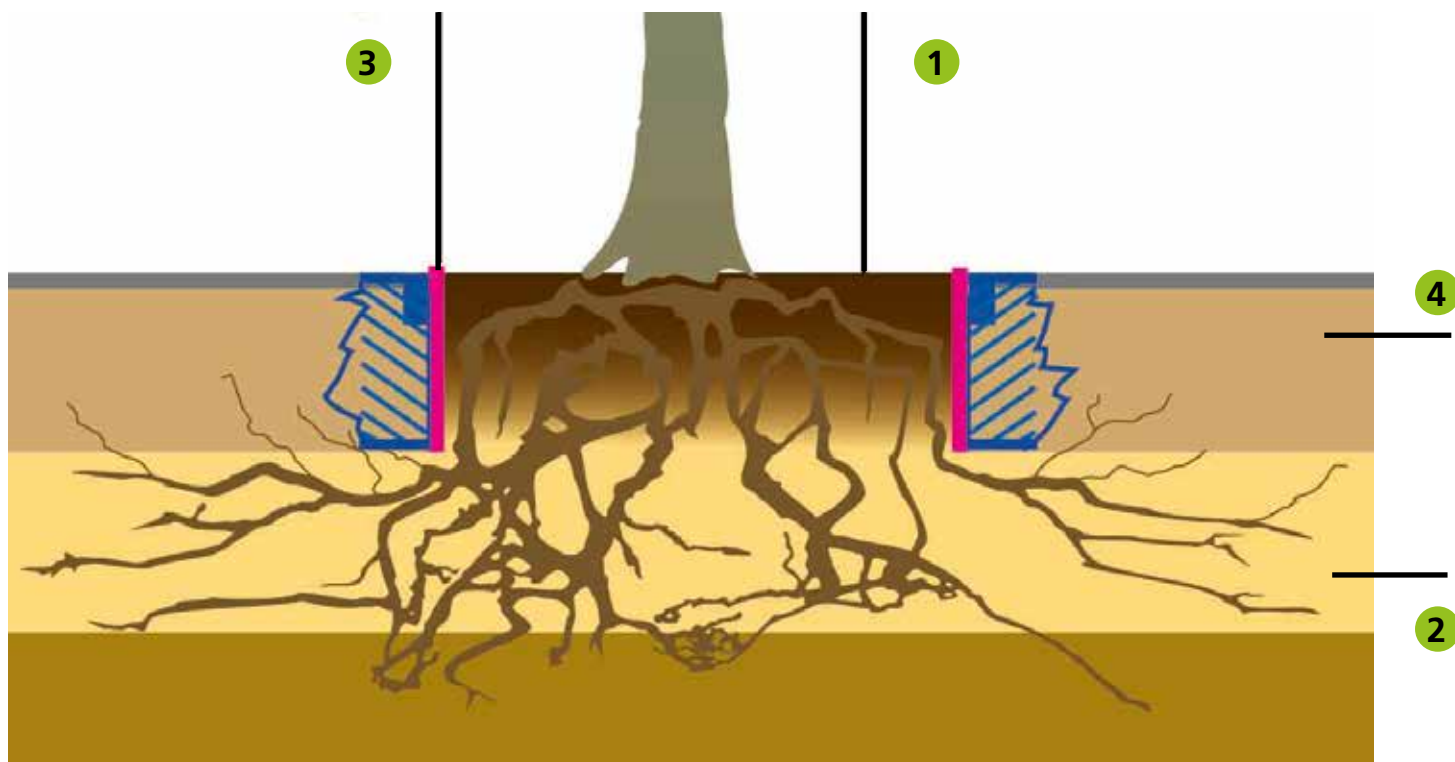

- 1** **LV** Augsnes virskārta  
**EN** Tree Soil  
**DE** Oberboden  
**FR** Terre végétale
- 2** **LV** Auglīgā augsne, blīvums < 2 Mpa  
**EN** Tree sand < 2 Mpa compacted  
**DE** Baumsubstrat < 2 Mpa verdichtet  
**FR** Sol de plantation tassé à 2 Mpa
- 3** **LV** Paneļi ar dubulto augšmalu 1 cm virs zemes  
**EN** Panels 1 cm above ground with double top edge  
**DE** Platten 1 cm über dem Oberbodenniveau  
**FR** Panneaux 1 cm au-dessus du niveau de la terre
- 4** **LV** Seguma konstrukcijas pamats, blīvums < 3 Mpa  
**EN** Street sand < 3 Mpa compacted  
**DE** Unterbau < 3 Mpa verdichtet  
**FR** Sable de rue tassé à 3 Mpa